

BATTERY CHARGER



SAMLEX EUROPE[®] B.V.

Smart Battery Charger

Model No.

WSC-1250Li
WSC-1280Li
WSC-12120Li
WSC-2425Li
WSC-2440Li
WSC-2460Li

Manual

Please read this manual carefully before installing and starting up this device.

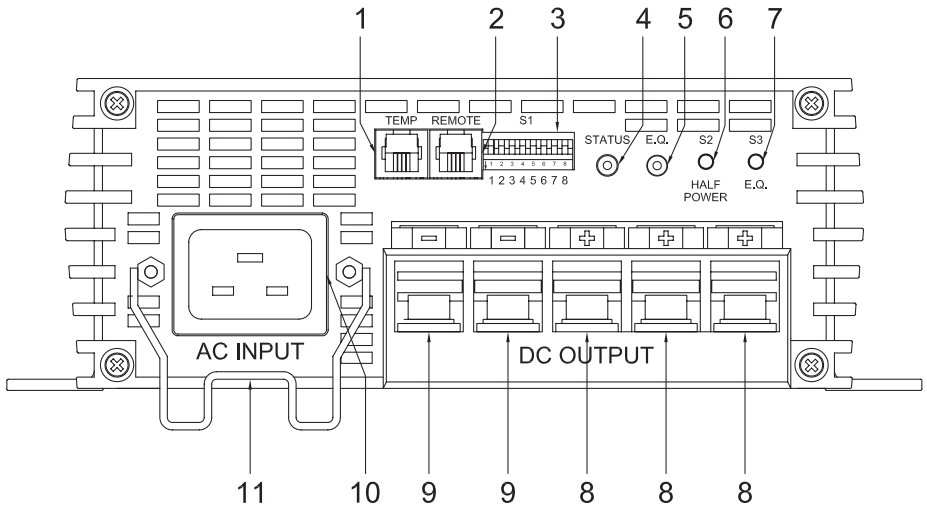


Figure 1 WSC-1250Li / WSC-1280Li / WSC-12120Li / WSC-2425Li / WSC-2440Li / WSC-2460Li
Charger Front View

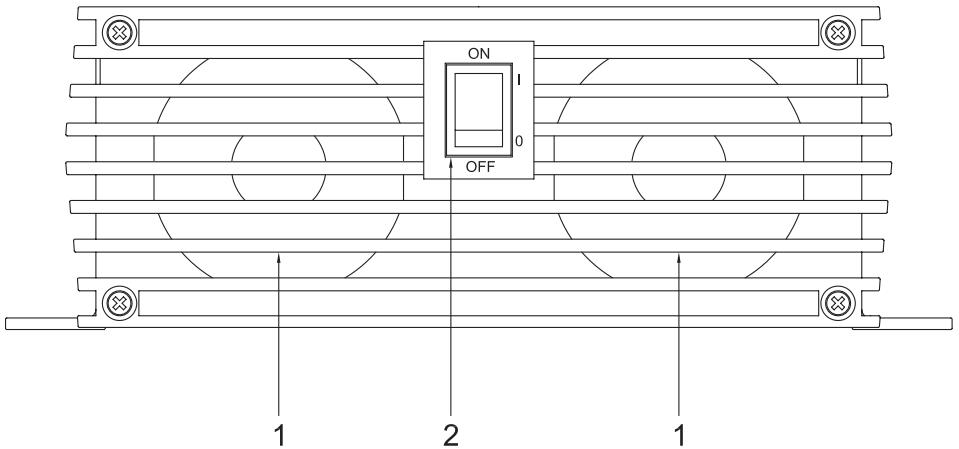


Figure 2 WSC-1250Li / WSC-1280Li / WSC-12120Li / WSC-2425Li / WSC-2440Li / WSC-2460Li
Charger Rear View

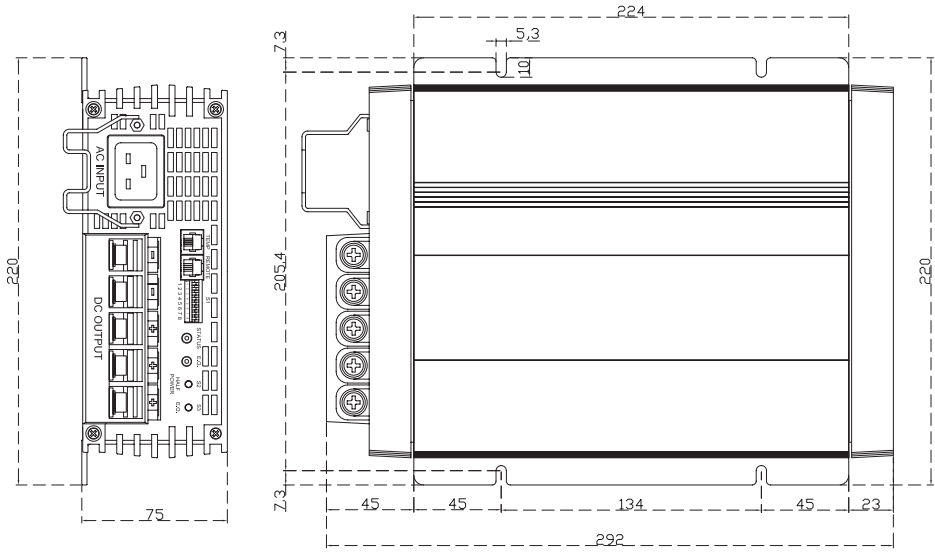


Figure 3a WSC-1250Li / WSC-2425Li Charger Top View (mm)

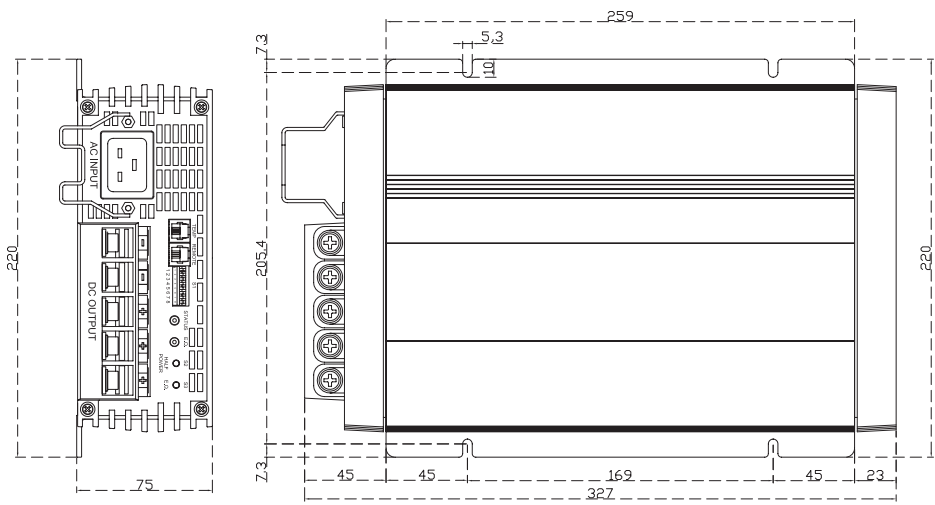


Figure 3b WSC-1280Li / WSC-2440Li Charger Top View (mm)

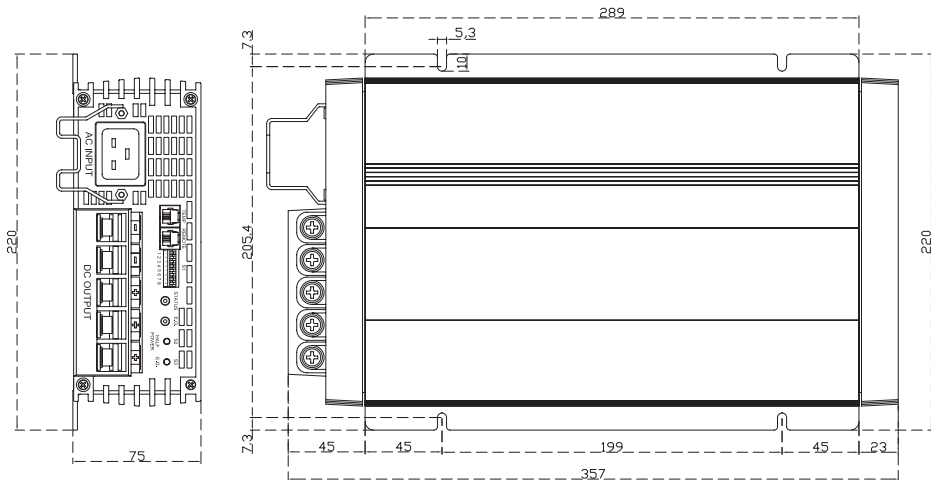


Figure 3c WSC-12120Li / WSC-2460Li Charger Top View (mm)

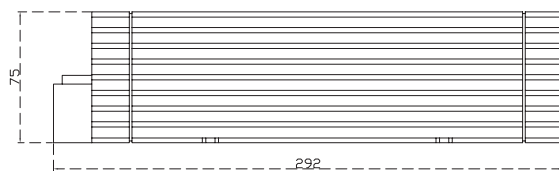


Figure 4a WSC-1250Li / WSC-2425Li Charger Side View (mm)

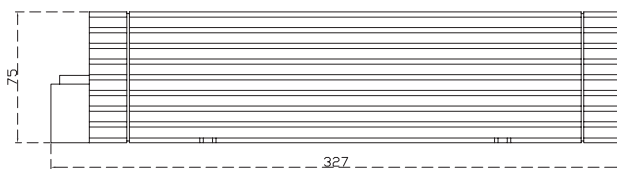


Figure 4b WSC-1280Li / WSC-2440Li Charger Side View (mm)



Figure 4c WSC-12120Li / WSC-2460Li Charger Side View (mm)

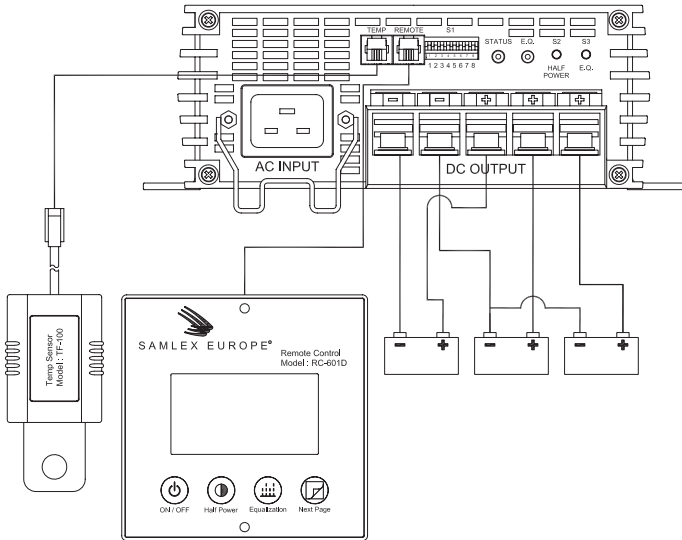


Figure 5 Making Connections

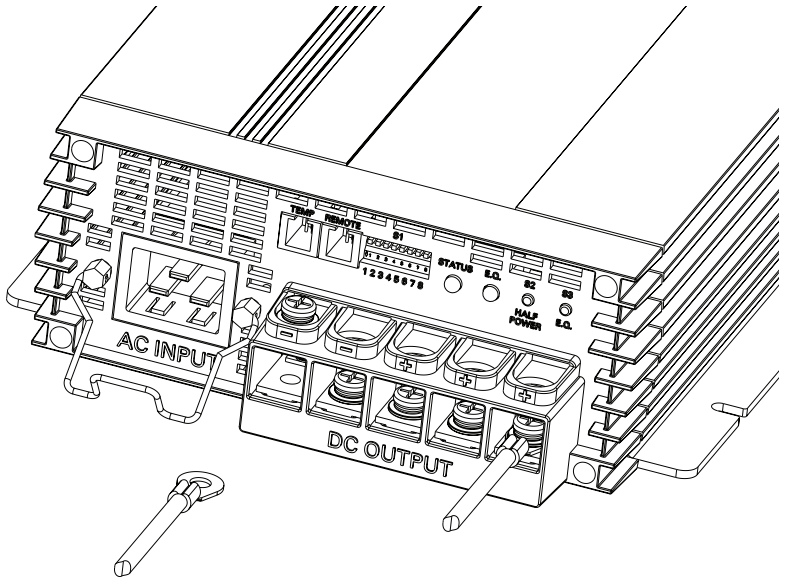


Figure 6 Cable Setup

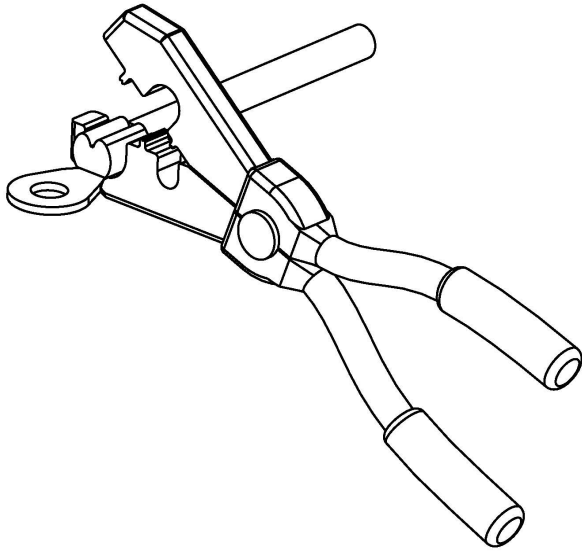


Figure 7 Fork

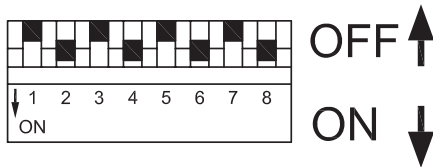


Figure 8 Switch

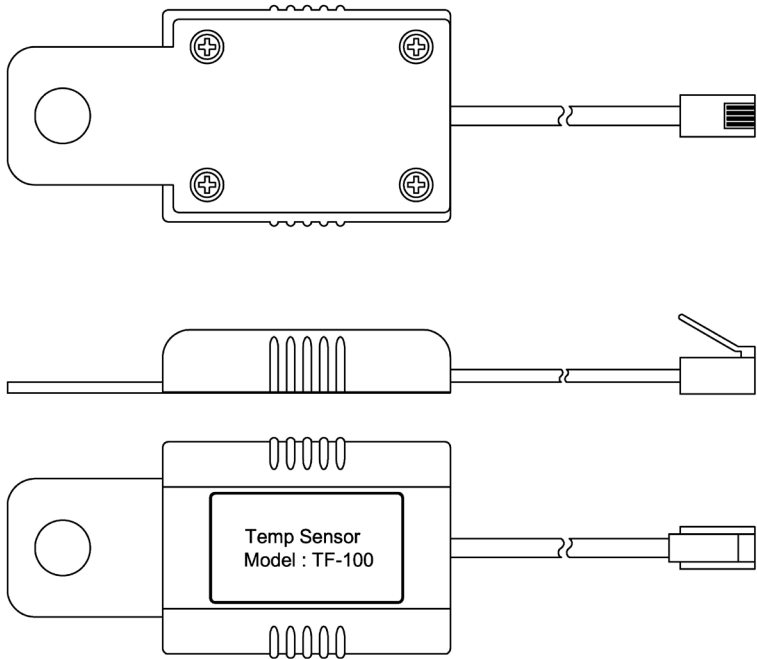


Figure 9 Temperature Sensor TF-100

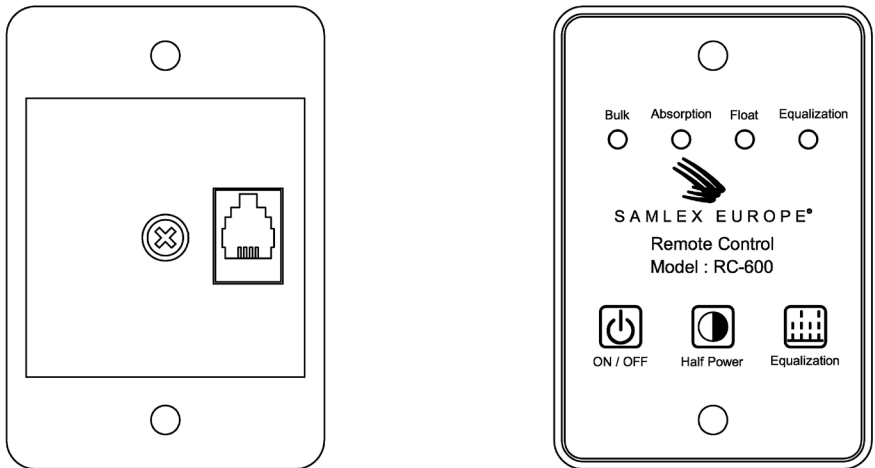


Figure 10 Remote Controller RC-600

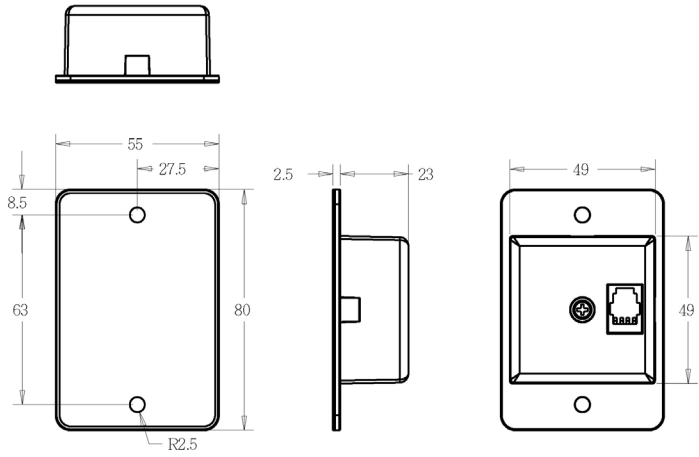


Figure 11 Remote Controller RC-600 Dimension (mm)

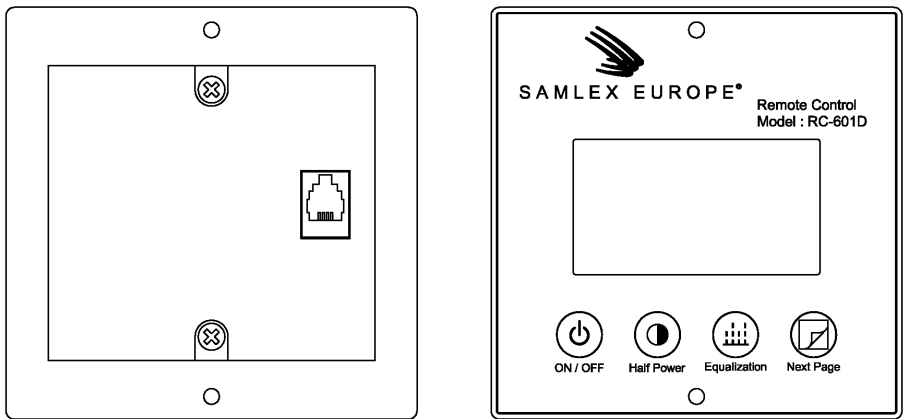


Figure 12 Remote Controller RC-601D

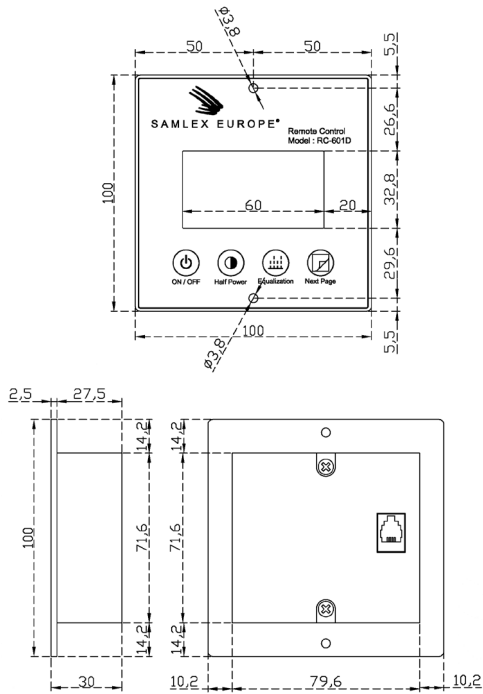


Figure 13 Remote Controller RC-601D Dimension (mm)

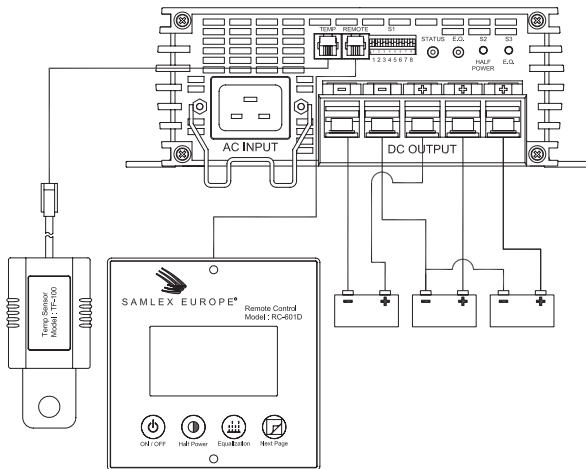


Figure 14 Making Connections (RC-601D)

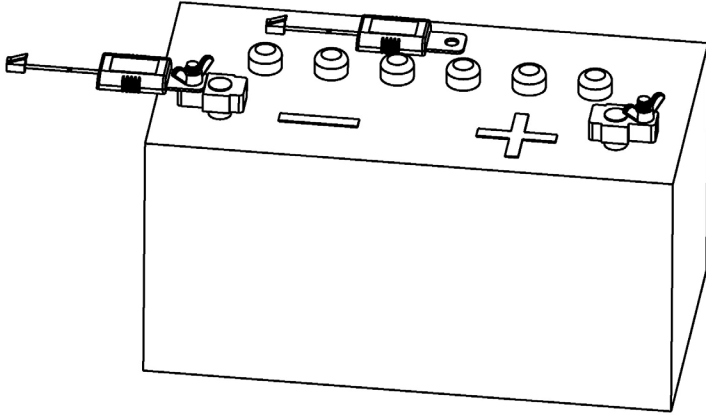


Figure 15 Temperature Sensor Setup

1	General safety and Installation instructions	13
	1.1 Operate the device safely	13
	1.2 Safety instructions when installing the device	13
	1.3 Electrical cables	13
	1.4 Installation on boats	13
2	WARNING	14
3	Applications and Descriptions	14
4	Introduction of the unit variants	15
5	Accessories	16
	5.1 Temperature Sensor TF-100	16
	5.2 Remote Controller RC-600	16
	5.3 Remote Controller RC-601D	17
6	Mounting of Battery Charger	18
7	Making Connections	18
8	Settings Gel/AGM/Lead-acid	19
	8.1 Charging voltage setting	19
	8.2 Half power mode setting	20
	8.3 Equalization setting	21
	8.4 VOID setting table	21
9	Settings Lithium	22
	9.1 Charging voltage setting	22
	9.2 Half power mode setting	23
	9.3 Equalization setting	23
	9.4 VOID setting table	23
10	Using the Charger Gel/AGM/Lead-acid	24
	10.1 Charging characteristic	24
	10.2 Using the remote controller RC-600	26
	10.3 Units with Temperature Sensor TF-100	27
11	Using the Charger Lithium	29
	11.1 Charging characteristic	29
	11.2 Using the remote controller RC-600	30
	11.3 Units with Temperature Sensor TF-100	31
12	Using the Charger	32
	12.1 Fan Speed	32
	12.2 Functional check	32

13	Trouble Shootings	33
13.1	The battery voltage would NOT increase after charging	33
13.2	The battery is NOT fully charged after a charging time about 20 hours	33
13.3	The battery discharges after a short period of time without usage	34
13.4	Please refer to the following table for other trouble shootings	34
14	Specifications	35
15	Declaration of Conformity	37

1.1 Operate the device safely



Warning!

Failure to observe this instruction can cause material damage, device malfunction, or danger of bodily injuries.

Fundamental safety measures should be observed when using electrical equipment to avoid the danger of:

- Electric shock
- Fire hazard
- Injury

1.2 Safety instructions when installing the device

- Handle the batteries with care; they contain strong acids.
- Avoid contact with the battery fluid agent.
- If come in contact with battery fluid, one should rinse the affected parts of the body or clothing with plenty of cold water and seek medical attention immediately.
- Be sure that the device has a firm foundation.
- Do NOT use sharp or hard objects to clean the device; doing so may cause device damage.

1.3 Electrical cables

If cables have to be fed through metal walls or other walls with sharp edges, use ducts or wire bushings to prevent damage.

- Lay the cables so that other people will NOT trip over them.
- Do NOT lay cables which are loose or bent next to electrically conductive materials.
- Do NOT pull the cables.
- Fasten the cables properly.
- Lay the cables so that they cannot be easily damaged
- Always use sockets that are grounded and secured by earth leakage circuit breaker.
- Only a specialist should make the electrical connections.
- Do NOT lay the 115V/230V line and the 12V/24V DC in the SAME cable duct!
- Keep to the indicated minimum cable cross-section.

1.4 Installation on boats

- Incorrect use or installation of the charger on boat may lead to corrosion of the boat. Please allow qualified personnel to perform the installation of the charger.

**Warning!**

Please read carefully about the following precautions.

Damages caused by failure to follow the instructions below will NOT be covered by warranty.

- Use the charger only as intended.
- Do NOT operate the charger if the housing or the cables are damaged.
- The charger may NOT be used to charge any other type of batteries than the ones indicated.
- Do NOT operate the device in a damp or wet environment.
- Do NOT charge a frozen battery; there is the danger of explosion.
- Keep this charger in a safe place, out of reach of children.
- Only qualified personnel who are familiar with the risks involved and the relevant regulations should carry out maintenance or repair work.
- The device must be fixed and installed in such a way that it will NOT fall over or fall down.

3 Applications and Descriptions

The chargers regenerate power or recharge mobile batteries used onboard vehicles or boats.

The charger can continuously charge supply batteries or starter batteries, enabling the batteries to maintain at a high capacity level.

The charger can be used for charging four types of batteries:

- Gel / AGM batteries
- Lead-acid starter batteries
- Maintenance-free batteries
- LiFePO4 (Lithium) batteries

Please inquire your battery supplier about the maximum capacities of your lead-acid or LiFePO4 (Lithium) batteries.

The charger is equipped with a polarity protection; this prevents the charger from being damaged in case of incorrect polarity. Please note that this reverse polarity protection only works if you first connect the battery and then switch on the charger!

An optional temperature sensor, (Figure 9 Temperature Sensor TF-100, Page. 7) that is connected at the battery being charged protects the battery against damage cause by varying outside temperature by adapting the charging voltage of the temperature to the battery. If the temperature sensor is used in the Lithium setting, the charger will stop charging below 0°C and above 45°C. Please connect two ends of Figure 9 Temperature Sensor TF-100 on Page 7 – one end to “TEMP” socket on front panel and another end to the battery.

An optional remote control (Figure 10 Remote Controller RC-600, Page. 7) can be obtained in order to provide remote access to the charger.

4 Introduction of the unit variants

The 3 or 4-stage (depending on the charge curve) battery charger can deliver different unit variants. It can charge batteries up to the specified battery capacity as indicated in the specification section. Regarding the identification of the specification of your unit, please see the model number on the type plate.

Front view Model-No.:

WSC-1250Li / WSC-1280Li / WSC-12120Li / WSC-2425Li / WSC-2440Li and WSC-2460Li

(See Figure 1 WSC-1250Li / WSC-1280Li / WSC-12120Li / WSC-2425Li / WSC-2440Li / WSC-2460Li Charger Front View, Page. 2)

No. Description

1. "TEMP" connection for temperature sensor (accessory TF-100)
2. "REMOTE" connection for remote control (accessory RC-600)
3. Switch field S1 for the selection of the charging voltage, charging time limitation and power supply mode (see also Figure 8 Switch, Page. 6)
4. "STATUS" LED
5. "E.Q." equalization LED
6. On/Off switch S2 for half power mode
7. Switch S3 for equalization on only
8. "+" (plus) DC output terminal for the supply battery
9. "-" (minus) DC output terminal for the supply battery
10. Connection for AC input 100~240 volts voltage
11. Plug holder

Rear view

(See Figure 2 Charger Rear View, Page. 2)

No. Description

1. Ventilation outlet
2. Power switch

5.1 Temperature Sensor TF-100

The temperature sensor (Figure 9 Temperature Sensor TF-100, Page. 7) measures the temperature of the battery or the environment around the battery and transfers the data to the charger. With deviating temperatures, the charging voltage increases, decreases or switches off accordingly.

5.1.1 Functions

- The temperature sensor transmits the battery temperature to the charger.
- The charging voltage is adjusted according to the temperature measured.

5.1.2 Installation

- Lay the cables from the batteries to the charger.
- Connect the temperature sensor to the "TEMP" socket of the charger.
- Connect the temperature sensor to the negative pole of the battery, or use a double-sided adhesive tape to attach the sensor to the top of the battery or in the vicinity of the battery (see Figure 15 Temperature Sensor Setup, Page. 10)

Note

The length of TF-100 cable is 5M.

5.2 Remote Controller RC-600

Figure 10 Remote Controller RC-600, Page. 7.

5.2.1 Functions

- Switch the charger ON and OFF.
- Half power mode ON / OFF.
- Equalization ON.
- Status monitoring.

Note

Attach the remote control at a well accessible place to ensure easy access of the charger.

Be careful when attaching the remote control, for wiring harnesses, cables and other components that are in the assembly range could be damaged in the process!

5.2.2 Installation

- Ensure approximately 49mm width, 49mm height and 23mm depth for the take-up of the remote controller (see Figure 11 Remote Controller RC-600, Page. 8).
- Connect the remote control to the charger. The connection cable is equipped with two equivalent modular plugs.
- Place the remote control into the opening created. Secure the remote control with screws on the upper and bottom margin of the faceplate – use the available drills.

Note

The length of RC-600 cable is 10M.

Note

The power switch at the unit must be switched ON, so that the unit can be switched ON and OFF with the remote control.

5.3 Remote Controller RC-601D

The remote controller RC-601D,

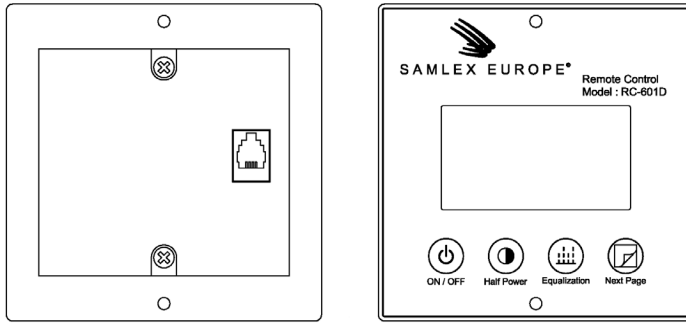


Figure 12 Remote Controller RC-601D, Page. 8) displays real-time information, settings and count down for different charging stages.

5.3.1 Functions

- Switch the charger ON and OFF.
- Half power mode ON / OFF.
- Equalization ON.
- Display real-time information and settings.

Note

The power switch at the charger must be switched ON, so that the charger can be switched ON and OFF by the RC-601D remote controller.

Caution!

Be careful when attaching the remote control, for wiring harnesses, cables and other components that are in the assembly range could be damaged in the process!

5.3.2 Installation

- Connect this remote controller to the “REMOTE” socket of the charger (See Figure 14 Making Connections (RC-601D), Page. 9).
- Ensure approximately 80mm width, 72mm height and 28mm depth for the take-up of the remote controller.

- Connect the remote controller to the charger. The connection cable is equipped with two equivalent modular plugs.
- Place the remote controller into the opening created. Secure the remote controller with screws on the upper and bottom margin of the faceplate – use the available drills.

Note

The length of RC-601D cable is 10M.

6 Mounting of Battery Charger

For mounting battery charger on wall or flat places please refer from Figure 3a for the WSC-1250Li and WSC-2425Li (page 4), figure 3b for the WSC-1280Li and WSC-2440Li (page 4) or figure 3c for the WSC-12120Li and WSC-2460Li Charger Top View (Page 4) regarding the size of housing and the location of mounting holes for your installation.

7 Making Connections

Refer to Figure 5 Making Connections, Page. 5.

- Place the charger in a dry, cool, clean, and ventilated space.
- Set the power switch to “0” (off) and pull out the main plug before connection or disconnecting the direct current connection.
- Connect the “-”(minus) battery pole with a connecting cable with the “-”(minus) terminal at the charger (see Figure 5 Making Connections, Page. 5).
- Connect the “+”(plus) battery pole with the connecting cable with the “+”(plus) terminal at the charger (see Figure 5 Making Connections, Page. 5).
- Lay the cables from the batteries to the charger.
- Fold the cable ends with the multicore cable ends.
- Supply the cable with a fork connection for an ideal connection with the terminal (see Figure 7 Fork, Page. 6).

Ensure correct polarity at battery and battery charger! The charger is equipped with a reverse polarity protection that only functions if you first connect the battery and then switch on the charger!



Warning!
Batteries with cell connection may NOT be charged.
Explosive gases could result from battery overheating.

Note

Only use cables with the designated wire cross sections to connect the charger to the battery.

Model No.	Supply battery
WSC-1250Li	10 mm ² ~ 16 mm ²
WSC-1280Li	16 mm ² ~ 25 mm ²
WSC-12120Li	25 mm ² ~ 50 mm ²
WSC-2425Li	6 mm ² ~ 10 mm ²
WSC-2440Li	10 mm ² ~ 16 mm ²
WSC-2460Li	16 mm ² ~ 25 mm ²

8 Settings Gel/AGM/Lead-acid

8.1 Charging voltage setting Gel/AGM/Lead-acid

The switch field S1 can be used to select the charging voltage, equalization voltage, charging time and the operation mode of this charger (see Figure 8 Switch, Page. 6).



Warning!
Please follow the table below to ensure correct operation of the charger
Make sure the DIP SWITCH 8 is in the OFF position:

Table 8-1 Switch Configure Charging Voltage

Switch 1	Switch 2	I phase voltage	Uo phase voltage	U phase voltage
OFF	OFF	13.5V/27.0V	14.0V/28.0V	13.5V/27.0V
OFF	ON	13.5V/27.0V	14.4V/28.8V	13.5V/27.0V
ON	OFF	13.8V/27.6V	14.4V/28.8V	13.8V/27.6V
ON	ON	13.8V/27.6V	14.8V/29.6V	13.8V/27.6V

Table 8-2 Switch Configure Equalize Voltage

Switch 3	Equalization voltage
OFF	Same as Uo phase voltage
ON	15.5V/31.0V

Table 8-3 Switch Configure Power/Charger Mode

Switch 4	Operation mode
OFF	Battery charger
ON	Power supply 13.2V/26.4V

Table 8-4 Switch Configure Uo Phase Time Limit

Switch 5	Switch 6	Charging time
ON	OFF	4 hours
OFF	ON	6 hours
ON	ON	8 hours
OFF	OFF	Unlimited

8.2.1 Half power mode setting when using S2

When the switch S2 “HALF POWER” is pushed, the output power will reduce to half of the chargers' amp rating and the “STATUS” LED will flash. The switch S2 is a kind of no memory switch. That means "ON/OFF" status cannot be identified from the switch. To enter and exit the "HALF POWER" mode by turns, please push the switch S2. The "HALF POWER" mode can be told from flashing "STATUS" LED.

8.2.2 Half power settings via Switch 7

When the Dip Switch 7 is in the ON position, the output power will decrease to half the maximum current of the charger, and the LED “STATUS” will flash.

Due to the fan speed is adjusted according to the function of the load and the temperature inside the charger, when "HALF POWER" mode is on, the fan speed will be slowed down and become silent because of output current reducing to half the charger amp rating.

Note

1. The half power mode can be set only when equalization function is NOT activated or the charger is NOT in the power supply mode. (see Table 8-6 VOID Setting table for pushing switch on front panel, Page. 21)
2. Please refer to section 12.1 on page 32 to understand the function of fan speed.

8.2.3 Selection Gel/AGM/loodzuur/Lithium

Table 8-5 Switch Configure GEL/AGM/lead-acid / Lithium

Switch 8	Charge mode
OFF	Gel/AGM/lead-acid
ON	LiFePO4 (Lithium)

8.3 Equalization setting

When the switch S3 “E.Q.” is pushed, the function of equalization is activated and the “E.Q.” LED will light RED. Whenever the function of equalization is activated, it only can be cancelled by turning off the charger.

Note

The equalization function can be set only when the charger is NOT in the half power mode and NOT in the power supply mode. (See Table 8-6 VOID Setting table for pushing switch on front panel, Page. 21).

8.4 VOID setting table

To avoid the void setting, please refer to Table 8-6 VOID Setting table for pushing switch on front panel, Page. 21.

Table 8-6 VOID Setting table for pushing switch on front panel

Push switch on front panel	Original working mode			
	Half power	Equalization	Others	Power Supply
S2 "HALF POWER" pushed or DIP switch 7 in ON position	Exit "HALF POWER" ("STATUS" LED lights)	VOID	Enter "HALF POWER" ("STATUS" LED flashing)	VOID
S3 "E.Q." pushed	VOID	VOID	Equalization ("E.Q." LED lights Red)	VOID

9.1 Charging voltage setting

The switch field S1 can be used to select the charging voltage, equalization voltage, charging time and the operation mode of this charger (see Figure 8 Switch, Page. 6).



Warning!

**Please follow the table below to ensure correct operation of the charger
Please make sure DIP SWITCH 8 is in the ON position.**

Table 9-1 Switch Configure Charging Voltage

Switch 1	Switch 2	CC phase voltage	CV phase voltage	Float phase voltage
OFF	OFF	14.2V/28.4V	14.2V/28.4V	NO*
OFF	ON	14.4V/28.8V	14.4V/28.8V	NO*
ON	OFF	14.6V/29.2V	14.6V/29.2V	NO*
ON	ON	14.6V/29.2V	14.6V/29.2V	13.8V/27.6V*

* Return to CC at 12.5V/25V

Table 9-2 Switch Configure Maximum Output Current

Switch 3	Switch 4	1250(A)	1280(A)	12120(A)	2425(A)	2440(A)	2460(A)
OFF	OFF	50	80	120	25	40	60
OFF	ON	45	70	110	22.5	35	55
ON	OFF	40	60	100	20	30	50
ON	ON	30	55	90	15	27.5	45

Table 9-3 Switch Configure CV Phase Time Limit

Switch 5	Switch 6	Charging time
OFF	OFF	1 hour i.c.w. final current in CV phase
OFF	ON	2 hour i.c.w. final current in CV phase
ON	OFF	4 hour i.c.w. final current in CV phase
ON	ON	1 minute i.c.w. final current in CV phase

Time or final current determines the charging time.

Table 9-4 Switch Configure Final Current in CV Phase

Switch 7	Final current in CV phase
OFF	5% of maximum charging current
ON	10% of maximum charging current

Maximum charging current can be set by Switch 3 and 4.

Table 9-5 Switch Configure GEL/AGM/Lead-acid / Lithium

Switch 8	Charge mode
OFF	Gel/AGM/lead-acid
ON	LiFePO4 (Lithium)

9.2 Half power mode setting

When the switch S2 "HALF POWER" is pushed, the output power will reduce to half of the chargers' amp rating and the "STATUS" LED will flash. The switch S2 is a kind of no memory switch. That means "ON/OFF" status cannot be identified from the switch. To enter and exit the "HALF POWER" mode by turns, please push the switch S2. The "HALF POWER" mode can be told from flashing "STATUS" LED.

Due to the fan speed is adjusted according to the function of the load and the temperature inside the charger, when "HALF POWER" mode is on, the fan speed will be slowed down and become silent because of output current reducing to half the charger amp rating.

Note

Please refer to section 12.1 on page 32 to understand the function of fan speed.

9.3 Equalization setting

The Equalization does not work in Lithium mode.

9.4 VOID setting table

To avoid the void setting, please refer to Table 9-6 VOID Setting table for pushing switch on front panel, Page. 23.

Table 9-6 VOID Setting table for pushing switch on front panel

Push switch on front panel	Original working mode			
	Half power	Equalization	Others	Power Supply
S2 "HALF POWER" pushed	Exit "HALF POWER" ("STATUS" LED lights)	VOID	Enter "HALF POWER" ("STATUS" LED flashing)	VOID
S3 "E.Q." pushed	VOID	VOID	VOID	VOID

10.1 Charging characteristic

The charging characteristic is generally designated as a modified IUoU characteristic.

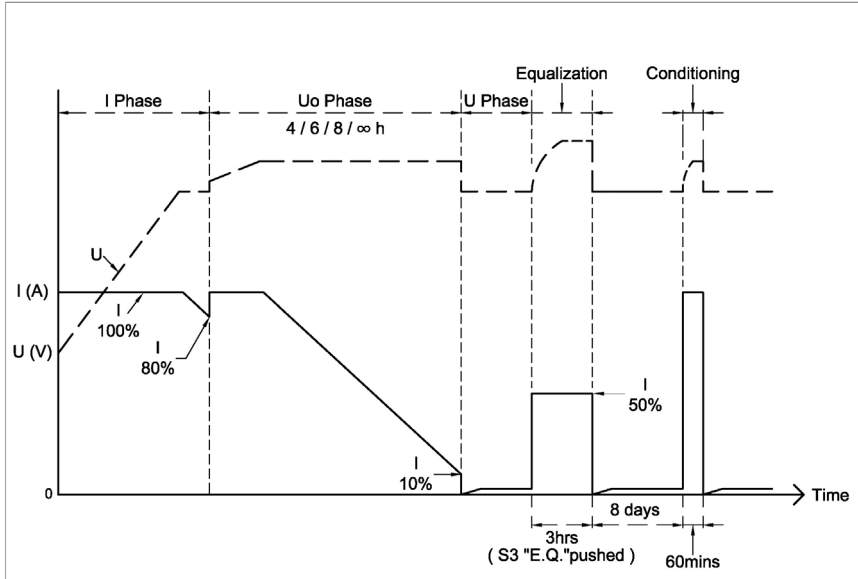


Figure 16 Charging characteristic

10.1.1 I phase (bulk)

The "STATUS" LED constantly lights Red.

In the first stage of the charging process, the depleted battery is charged with a constant current until the battery voltage reaches I phase setting voltage (13.5V/27.0V or 13.8V/27.6V). When the battery reaches this voltage level, the charging current gradually drops. When the current drops down to 80%, the charger switches over to Uo phase setting voltage (14.0V/28.0V or 14.4V/28.8V or 14.8V/29.6V). Typically the battery is charged to 70-80% of its capacity.

10.1.2 Uo phase (absorption)

The "STATUS" LED constantly lights Orange.

This main charging phase could be set to the maximum of 4/6/8 hours or unlimited, and the current rises again to its maximum value. The current remains constant as long as the battery voltage is below Uo phase setting voltage (14.0V/28.0V or 14.4V/28.8V or 14.8V/29.6V). After reaching the setting voltage, it remains constant. However, the current drops again. Within this main charging phase, the battery is charged to 95% of its capacity.

Note

The charging voltage and the period for the main charging phase (U₀ phase) can be selected using the switch field S1.

10.1.3 U phase (float)

The "STATUS" LED constantly lights Green. If the current decreases to 10% or under the rated current or if the time limit of 4/6/8 hours is exceeded, then the charger switches over to economy charging (13.5V/27.0V or 13.8V/27.6V).

Note

Batteries may be charged separately from each other if the chargers have double charging or three-fold charging connections. The outputs are separated internally by diodes, thus the weaker battery will be always first charged to the charging level of the stronger battery.



Attention

The maximum battery capacity should NOT exceed the specified capacity, otherwise the functions of the individual charging phases could be influenced.

10.1.4 8-day conditioning

If the battery charger stays at U phase for 8 days, it will switch back to 3-stage charging IUoU, and stay at U₀ phase for 60 minutes to revive the battery.

Note

1. 8-day conditioning will be terminated whenever equalization function or half power mode is activated.
2. When the charger is in the equalization stage or half power mode, 8-day conditioning will NOT be triggered.

10.1.5 Equalization

The function of equalization could be activated as long as the battery charger is NOT in the half power mode or power supply mode.

The function of equalization will be activated only when the battery is charged and stays in U₀ phase with < 25% of Full load current.

The battery charger will charge the battery 3 hours with equalization setting voltage (15.5V or U₀ phase setting voltage) and half of rated current.

Note

Once the equalization function is activated, it can only be cancelled by turning off the battery charger.

10.2 Using the remote controller RC-600

There are three buttons and four LEDs on RC-600 (see Figure 10 Remote Controller RC-600, Page. 7).

- ON/OFF button to switch the charger ON and OFF
- Half Power button to enter/exit "HALF POWER" mode
- Equalization button to activate the function of equalization
- Bulk LED to indicate the charging stage of I phase
- Absorption LED to indicate the charging stage of Uo phase
- Floating LED to indicate the charging stage of U phase
- Equalization LED to indicate the function of equalization is activated

To avoid the VOID setting from the remote control, please refer to Table 10-1 VOID Setting.

Table 10-1 VOID Setting table for pressing button on remote controller

RC-600 buttons	Charger working mode			
	Half power	Equalization	Others	Power Supply
"HALF POWER" pressed	Exit "HALF POWER" ("STATUS" LED lights)	VOID	Enter "HALF POWER" ("STATUS" LED flashing)	VOID
S3 "E.Q." pushed	VOID	VOID	Equalization ("E.Q." LED lights Red)	VOID
"ON/OFF" pressed	Stand by ("STATUS" LED slowly flashing Red)	Stand by ("STATUS" LED slowly flashing Red)	Stand by ("STATUS" LED slowly flashing Red)	Stand by ("STATUS" LED slowly flashing Red)

Note

- The power switch at the unit must be switched ON, so that the unit can be switched ON and OFF with the remote control.
- The "ON/OFF" button on the RC-600 should be pressed for 2 seconds to switch OFF the battery charger, and 0.5 second to turn ON.

10.3 Units with Temperature Sensor TF-100

A temperature sensor (Figure 9 Temperature Sensor TF-100, Page. 7) can be connected in order to provide the optimum charging functioning. The charging voltages, as can be seen from the following diagrams, vary, depending on the battery temperature.

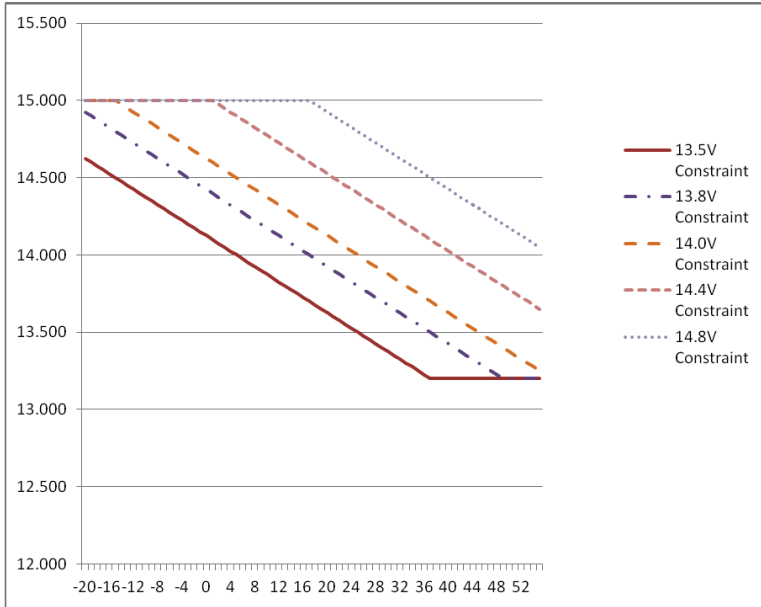


Figure 17 Temperature Compensation for 12V Model

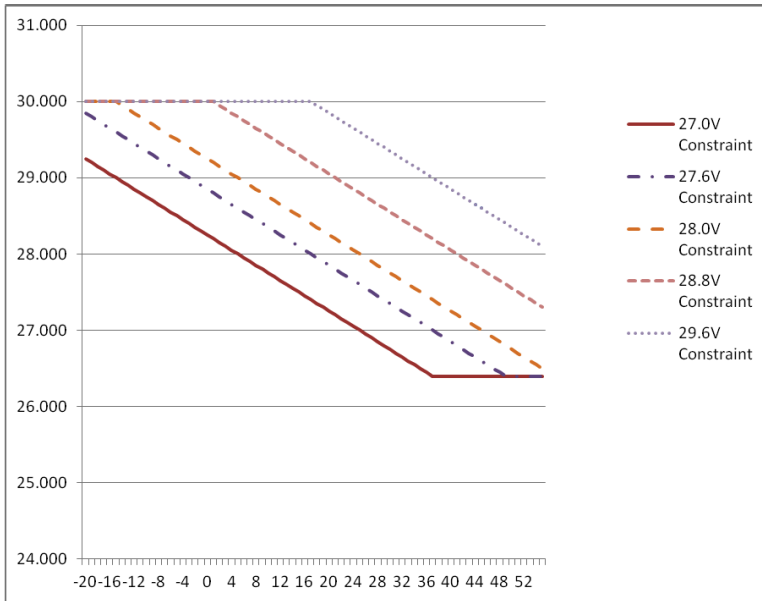


Figure 18 Temperature Compensation for 24V Model

Note

- The temperature sensor is only working in I, Uo and U phases.
- The output voltage is adjusted according to the function $-25\text{mV}/^\circ\text{C}$ for WSC-1250 and $-50\text{mV}/^\circ\text{C}$ for WSC-2425. However, the maximum output voltage is 15V/30V, and the minimum is 13.2V/26.4V.
- When the battery temperature detected via TF-100 reaches 55°C , the charger will stop the charging process ("E.Q." LED flashing Red and "STATUS" LED lights Orange), and auto recover when temperature drops to 45°C .

11.1 Charging characteristic

The charging characteristic is a CC/CV characteristic.

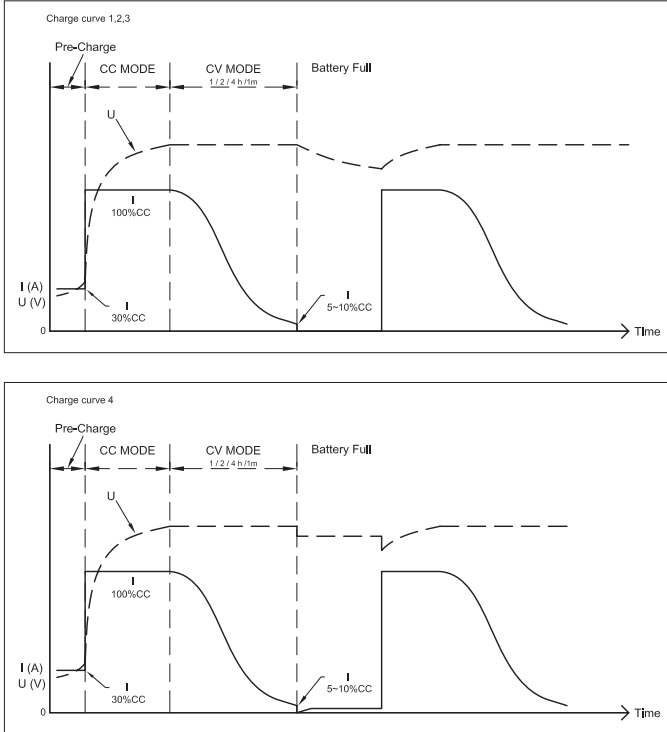


Figure 19 Charging characteristic

11.1.1 Pre-charge

The current is a maximum of 30%(CC) up to a voltage of 12.6V in this phase.

11.1.2 CC phase (Constant Current)

The "STATUS" LED constantly lights Red.

In this stage of the charging process, the depleted battery is charged with a constant current until the battery voltage reaches CV phase setting voltage (14.2V/14.4V/14.6 or 28.4/28.8/29.2V). The charger will switch over to the CV phase when the battery reaches this voltage level.

11.1.3 CV phase (Constant Voltage)

The "STATUS" LED constantly lights Orange.

This main charging phase could be set to the maximum of 1 minute, 1 hour, 2 hours or 4 hours. Switching to the next phase also depends on the current 5% or 10% of the set charging power.

Note

The charging voltage, current and time for the CV phase can be selected by means of the switch field S1.

11.1.4 Battery full phase

The "STATUS" LED constantly lights Green. If the current decreases to 10% or under the rated current or if the time limit of 1 minute, 1 hour, 2 hours or 4 hours is exceeded, then the charger switches over to the battery full phase. When using the first 3 positions of SW1 and 2 (see chapter 9.1, page 22) the charger stops and does not return to the CC phase until the voltage drops below the 12.5V/25V. In position 4 the charger goes to float and delivers 13.8V/27.6V. If the voltage drops below 12.5V/25V, the charger returns to the CC phase.

Note

Batteries may be charged separately from the three-fold charging connections. The outputs are separated internally by FET's, thus the weaker battery will be always first charged to the charging level of the stronger battery.



Attention

The maximum battery capacity should NOT exceed the specified capacity, otherwise the functions of the individual charging phases could be influenced.

11.1.5 Equalization

The Equalization is not possible in the Lithium mode.

11.2 Using the remote controller RC-600

There are three buttons and four LEDs on RC-600 (see Figure 10 Remote Controller RC-600, Page. 7).

- ON/OFF button to switch the charger ON and OFF
- Half Power button to enter/exit "HALF POWER" mode
- Equalization button to activate the function of equalization (does not function in Lithium mode)
- Bulk LED to indicate the charging stage of CC phase
- Absorption LED to indicate the charging stage of CV phase
- Floating LED to indicate the charging stage of Battery full phase
- Equalization LED to indicate the function of equalization is activated (does not function in Lithium mode)

To avoid the VOID setting from the remote control, please refer to Table 11-1 VOID Setting.

Table 11-1 VOID Setting table for pressing button on remote controller

RC-600 buttons	Charger working mode			
	Half power	Equalization	Others	Power Supply
"HALF POWER" pressed	Exit "HALF POWER" ("STATUS" LED lights)	VOID	Enter "HALF POWER" ("STATUS" LED flashing)	VOID
S3 "E.Q." pushed	VOID	VOID	VOID	VOID
"ON/OFF" pressed	Stand by ("STATUS" LED slowly flashing Red)	VOID	Stand by ("STATUS" LED slowly flashing Red)	Stand by ("STATUS" LED slowly flashing Red)

Note

- The power switch at the unit must be switched ON, so that the unit can be switched ON and OFF with the remote control.
- The "ON/OFF" button on the RC-600 should be pressed for 2 seconds to switch OFF the battery charger, and 0.5 second to turn ON.

11.3 Units with Temperature Sensor TF-100

The charger will stop below 0°C and above 45°C in the Lithium mode. There is no voltage compensation.

Note

- The temperature sensor is only working in I, Uo and U phases.
- The output voltage is adjusted according to the function -25mV/°C for WSC-1250 and -50mV/°C for WSC-2425. However, the maximum output voltage is 15V/30V, and the minimum is 13.2V/26.4V.
- When the battery temperature detected via TF-100 reaches 55°C, the charger will stop the charging process ("E.Q." LED flashing Red and "STATUS" LED lights Orange), and auto recover when temperature drops to 45°C.

12.1 Fan Speed

The fan speed is adjusted according to the load and the temperature inside the charger. When the load is over 70% of the chargers' amp rating, the fan will turn in 100% speed. If the load is below 70% of the chargers' amp rating, the fan speed will be determined according to the temperature inside the charger.

When the temperature goes up, the fan will start turning with temperature 45°C, and reach 100% speed with temperature 65°C.

When the temperature goes down, the fan will slow down the turning speed with temperature 60°C, and stop turning with temperature 40°C.

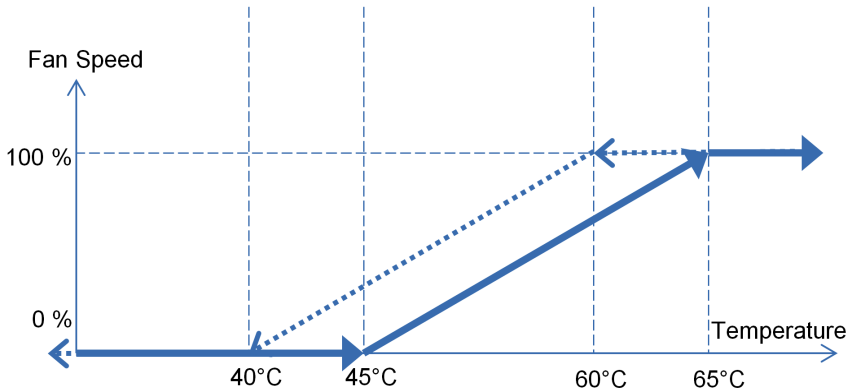


Figure 22 Fan Speed

12.2 Functional check

The status LED in the front of the unit can be used to check the status of the charging process.

Note

The optional remote controller can also be used to check the status of the charging process. The LEDs on the remote controller indicate different charging phases with their colors respectively.

Table 12-1 Normal Functional Check Table

"E.Q." LED (not in Lithium mode)	"STATUS" LED	Status
	Red, constantly lit	I/CC phase
	Orange, constantly lit	Uo/CV phase
	Green, constantly lit	U/battery full phase
Red, constantly lit	Red, constantly lit	I phase, Equalization is activated
Red, constantly lit	Orange, constantly lit	Uo phase, Equalization is activated
Red, constantly lit	Green, constantly lit	U phase, Equalization is activated
Red, constantly lit		Equalization is executed
	Red, flashing	I/CC phase, half power
	Orange, flashing	Uo/CV phase, half power
	Green, flashing	U/battery full phase, half power
	Green, double flashing	Power supply mode (not in Lithium mode)
	Red, slowly flashing	Stand-by mode (RC-600/RC-601D)

13 Trouble Shootings

13.1 The battery voltage would NOT increase after charging

- If possible, measure with a suitable multi-meter during the charging to verify if the voltage at the battery terminals increases.
- Determine whether the terminals are connected properly to the battery poles. Clean the battery poles if necessary to ensure better connection.

13.2 The battery is NOT fully charged after a charging time about 20 hours

- Disconnect the power to the charger.
- Remove the battery from the charging terminals and wait for a few minutes.

Then, measure the voltage at the battery terminals with the multi-meter.

13.2.1 12V battery

If the multi-meter displays a voltage of 10V or less, this indicates that the battery is defective and can not be charged any longer.

13.2.2 24V battery

If the multi-meter indicates a voltage of 20V or below, allow the battery be checked by a specialist, if necessary dispose of the battery.

13.3 The battery discharges after a short period of time without usage

Measure the voltage at the battery terminals with a suitable multi-meter. If the multi-meter indicates a voltage below 12V of a 12V battery or a voltage below 24V of a 24V battery, then the battery is too weak to retain the charge.

13.4 Please refer to the following table for other trouble shootings

Table 13-1 Abnormal Functional Check Table

"E.Q." LED (not in Lithium mode)	"STATUS" LED	Status
Red, flashing	Red, constantly lit	Short circuit and low voltage, shut down
Red, flashing	Orange, constantly lit	Battery temperature abnormal, stop charging (TF-100)
Red, flashing	Red, flashing	Fan abnormal
Red, flashing	Orange, flashing	TF-100 connected to the remote socket
Red, flashing	Green, flashing	Charger overheated (>100°C), stop charging
Red, flashing	Red and green by turns	Charging voltage too high and shut down
Red, flashing	Orange and green by turns	Charging current too high and shut down
Red, flashing	Red and orange by turns	Defective fuse or reverse-polarity
Red, flashing for 10 seconds		Void setting

14 Specifications

ENG

Model number:	WSC-1250Li	WSC-1280Li	WSC-2425Li
Input voltage range	100-240V AC		
Input frequency	50-60Hz		
Power factor correction	>0,97		
Efficiency at 230V AC	>91%	>92%	>93%
Efficiency at 115V AC	>89%	>90%	>91%
Input current at 230V AC	3.62A	5.81A	3.51A
Input current at 115V AC	7.32A	11.67A	7.1A
Charge mode	Normal 3-Stage/Equalization 4-Stage/CC/CV		
Output charging voltage standard mode	14V/14.4V/14.8V		28V/28.8V/29.6V
Output float voltage standard mode	13.5V/13.8V		27V/27.6V
Output charging voltage Lithium mode	14.2V/14.4V/14.6V		28.4V/28.8V/29.2V
Output float voltage Lithium mode	Non or 13.8V (i.c.w. 14.6V)		Non or 27.6V (i.c.w. 29.2V)
Output power mode voltage	13.2V		26.4V
Output charging current	0-50A	0-80A	0-25A
Adjustable output charging current	50, 45, 40 of 30A	80, 70, 60 of 55A	25, 22.5, 20 of 15A
Equalization mode	15.5V (0-25A)	15.5V (0-40A)	31.0V (0-12.5A)
Half power mode (silent mode)	0-25A	0-40A	0-12.5A
Battery connection	3		
Battery types	Lead-acid/GEL/AGM/LiFePO4		
Battery capacity	standard: 500Ah / Lithium: 150-250Ah	standard: 800Ah / Lithium: 240-400Ah	standard: 250Ah / Lithium: 75-125Ah
Operating temperature	-20°C ~ +50°C		
Storage temperature	-40°C ~ +85°C		
Air humidity	10 - 90%		
Remote control (accessory)	RC-600/RC-601D		
Temperature compensation (accessory)	TF-100		
Dimensions L*W*H (mm)	292*220*75	327*220*75	292*220*75
Weight	2.5kg	3kg	2.5kg
Safety standard	EN 60335-1 EN 60335-2-29		
EMC Standard: EMI	EN 55014-1 EN 61000-3-2 EN 61000-3-3		
EMS	EN 55014-2 IEC 61000-4-2,3,4,5,6,11		
Protective devices	Short circuit protection Over voltage protection Over current protection Battery charger over temperature Battery over temperature		

14 Specifications

ENG

Model number:	WSC-2440LI	WSC-12120LI	WSC-2460LI
Input voltage range	100-240V AC		
Input frequency	50-60Hz		
Power factor correction	>0.97		
Efficiency at 230V AC	>93%	N/A	
Efficiency at 115V AC	>91%	N/A	
Input current at 230V AC	5.62A	N/A	
Input current at 115V AC	11.33A	N/A	
Charge mode	Normal 3-Stage/Equalization 4-Stage/CC/CV		
Output charging voltage standard mode	28V/28.8V/29.6V	14V/14.4V/14.8V	28V/28.8V/29.6V
Output float voltage standard mode	27V/27.6V	13.5V/13.8V	27V/27.6V
Output charging voltage Lithium mode	28.4V/28.8V/29.2V	14.2V/14.4V/14.6V	28.4V/28.8V/29.2V
Output float voltage Lithium mode	Non or 27.6V (i.c.w. 29.2V)	Non or 13.8V (i.c.w. 14.6V)	Non or 27.6V (i.c.w. 29.2V)
Output power mode voltage	26.4V	13.2V	26.4V
Output charging current	0-40A	0-120A	0-60A
Adjustable output charging current	40, 35, 30 of 27.5A	120, 110, 100 of 90A	60, 55, 50 of 45A
Equalization mode	31.0V (0-20A)	15.5V (0-60A)	31.0V (0-30A)
Half power mode (silent mode)	0-20A	0-60A	0-30A
Battery connection	3		
Battery types	Lead-acid/GEL/AGM/LiFePO4		
Battery capacity	standard: 400Ah / Lithium: 120-200Ah	standard: 1200Ah / Lithium: 360-600Ah	standard: 600Ah / Lithium: 180-300Ah
Operating temperature	-20°C ~ +50°C		
Storage temperature	-40°C ~ +85°C		
Air humidity	10 - 90%		
Remote control (accessory)	RC-600/RC-601D		
Temperature compensation (accessory)	TF-100		
Dimensions L*W*H (mm)	327*220*75	N/A	N/A
Weight	3kg	N/A	
Safety standard	EN 60335-1 EN 60335-2-29		
EMC Standard: EMI	EN 55014-1 EN 61000-3-2 EN 61000-3-3		
EMS	EN 55014-2 IEC 61000-4-2,3,4,5,6,11		
Protective devices	Short circuit protection Over voltage protection Over current protection Battery charger over temperature Battery over temperature		

For the following equipment :

Product Name:
SMART BATTERY CHARGER

Model No.:
WSC-1250Li, WSC-1280Li, WSC-12120Li, WSC-2425Li, WSC-2440Li and WSC-2460Li

Trade Name:



Applicant:
SAMLEX EUROPE B. V.

Address:
ARIS VAN BROEKWEG 15, 1507 BA ZAANDAM THE NETHERLANDS

Is herewith confirmed to comply with the EMC requirements set out in the Directive 2014/30/EU and LVD requirements set out in the Directive 2014/35/EU of the European Parliament and of the Council of April 20, 2016 on the approximation of the laws of the Member States relating to electromagnetic compatibility and EC Low Voltage Directive. For the evaluation regarding the electromagnetic interference, the following EMC standards were applied:

EMI: Class A	EMS:
EN55014-1:2006+A2:2011	EN55014-2:1197+A2:2008
EN61000-3-2:2006+A1:2009+A2:2009	EN61000-4-2:2009
EN61000-3-3:2013	EN61000-4-3:2006+A2:2010
	EN61000-4-4:2012
LVD:	EN61000-4-5:2014
EN60335-1:2012+A11	EN61000-4-6:2014
EN60335-2-26:2004+A2:2010	EN61000-4-11:2004

The following manufacturer/importer is responsible for this declaration:


M. van Veen Zaandam 30-09-2022

For the following equipment :

Product Name:

SMART BATTERY CHARGER

Model No.:

WSC-1250Li, WSC-1280Li, WSC-12120Li, WSC-2425Li, WSC-2440Li and WSC-2460Li

Trade Name:



Applicant:

SAMLEX EUROPE B. V.

Address:

ARIS VAN BROEKWEG 15, 1507 BA ZAANDAM THE NETHERLANDS

Is herewith confirmed to comply with the EMC requirements set out in the electromagnetic compatibility regulations 2016. For the evaluation regarding the electromagnetic interference, the following EMC standards were applied:

EMI: Class A

EN55014-1:2006+A2:2011

EN61000-3-2:2006+A1:2009+A2:2009

EN61000-3-3:2013

LVD:

EN60335-1:2012+A11

EN60335-2-26:2004+A2:2010

EMS:

EN55014-2:1197+A2:2008

EN61000-4-2:2009

EN61000-4-3:2006+A2:2010

EN61000-4-4:2012

EN61000-4-5:2014

EN61000-4-6:2014

EN61000-4-11:2004

The following manufacturer/importer is responsible for this declaration:

M. van Veen

Zaandam

30-09-2022



www.samlex.com
www.samlex-solar.com